

E-Z LATCH

DOUBLE SWING GATE LATCH

Steel

INSTALLATION INSTRUCTIONS

Hang gates in place so that the bottom of the gates have approximately 2" of ground clearance.

STEP 1

Position top and bottom guides on one side of the gate frame and secure in place with bolts.


STEP 2

Cut a 1-3/8" OD x 3" long piece of tubing and place into the ground to hold the bottom of the E-Z latch rod in between the gates.

STEP 3

Position E-Z latch so that the bottom of the rod inserts into the tubing in the ground 2". Tighten all bolts securely.

NOTE: Top screw holds latch in the open position. Bottom screw keeps rod from being pulled out of the guides.

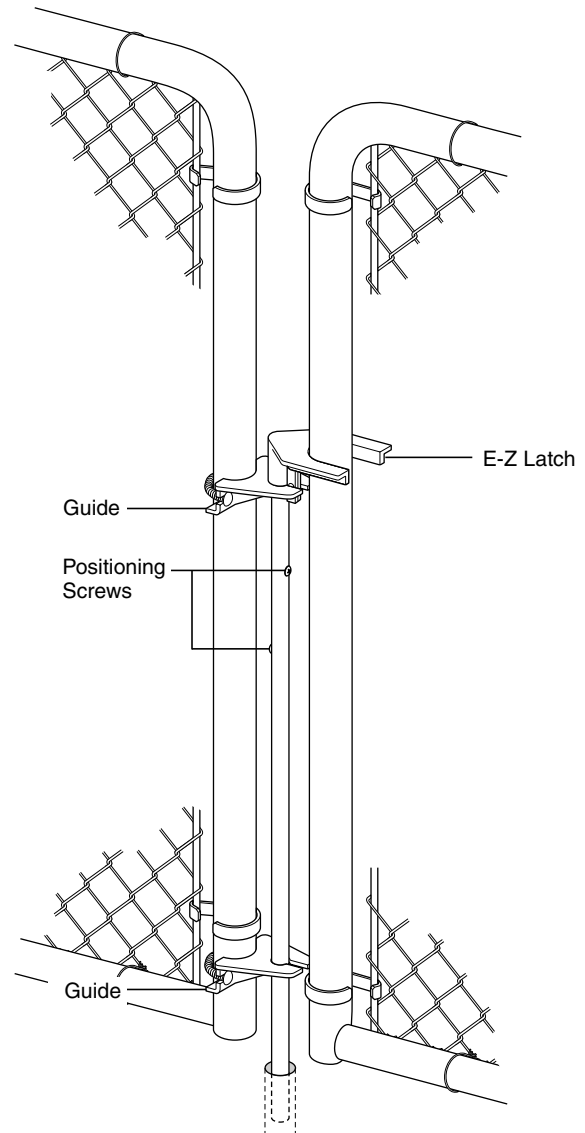

For more information, contact our
Customer Service Department:
1-888-MH-FENCE (toll-free)
110 E. La Habra Blvd., La Habra, CA 90631
e-mail: info@FenceOnline.com • www.FenceOnline.com

