

# GRAVITY-TYPE

# GATE CLOSER

Pressed Steel – Galvanized

## INSTALLATION INSTRUCTIONS

*Ensure post hinges and frame hinges are positioned approximately 8" from the top and bottom of the gate post with top hinge pin pointing up and bottom gravity fork pointing up.*


**NOTE:** 2" spacing required between gate post and gate frame

### STEP 1 — Top Hinge Assembly

Place post hinge around post with pin upward and secure in position with 3/8" carriage bolts. Position gate hinge around gate frame and over the post hinge pin. Secure with 3/8" carriage bolts.

### STEP 2 — Bottom Hinge Assembly

Place gravity plate post hinge around gate post and secure in position with 3/8" carriage bolts. Position gravity fork frame hinge around gate frame with spring pins upward. Secure with 3/8" carriage bolts.

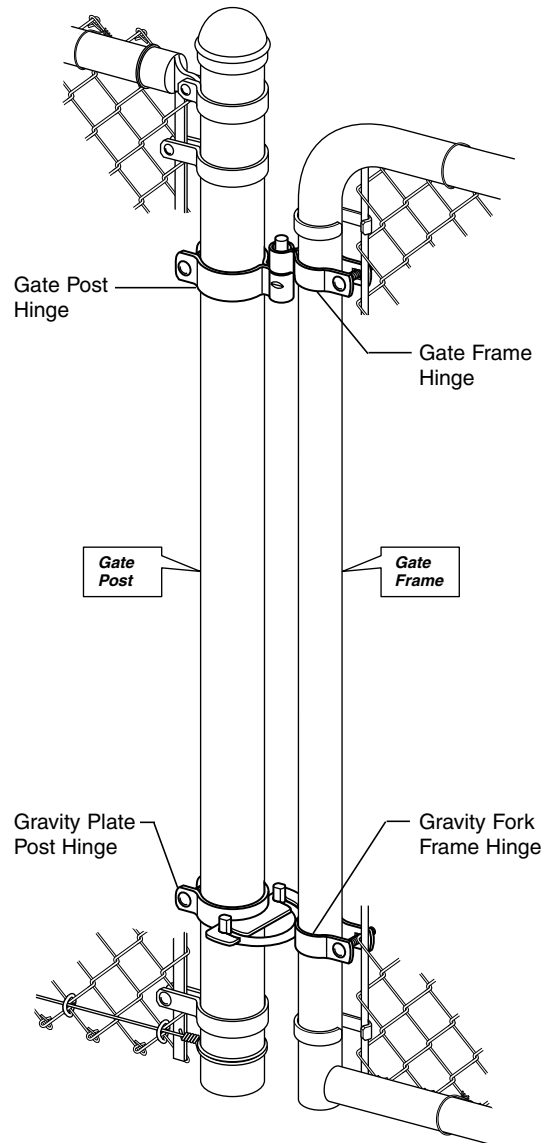

Gate Post Hinge	Gate Frame Hinge	Gravity-Type Part No.
1-7/8"	1-3/8"	017501
2-3/8"	1-3/8"	017502

For more information, contact our  
Customer Service Department:  
1-888-MH-FENCE (toll-free)  
110 E. La Habra Blvd., La Habra, CA 90631  
e-mail: [info@fenceonline.com](mailto:info@fenceonline.com) • [www.fenceonline.com](http://www.fenceonline.com)



*First Because They Last.*